
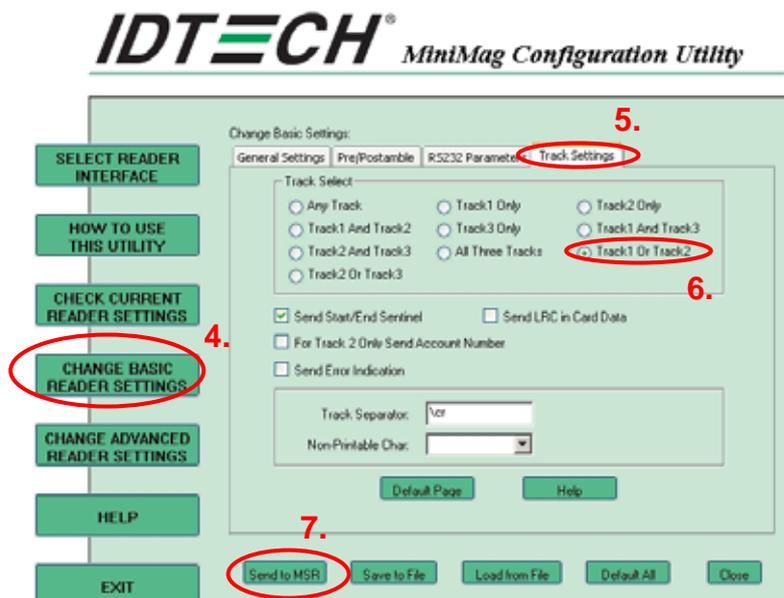


ID Tech MSR Track Setting

- I. The MSR default setting is **ISO Track 1 & 2. (For specific / customized track settings, please advise manufacturer before production)**
- II. In the event of any requirement to change the MSR setting, please run the “IDTECH configuration utility” in the attached driver disk.

MSR Track Setting Procedure:

1. Select “reader interface” for magnetic card reader and then click the “continue”.
2. Select “change basic reader settings” and “Track Settings”.
3. Select Track 1 or Track 2. (Factory Default)
4. Click “Send to MSR” and then download configuration data to decoder.
5. If you have any other setting question, please check the exposition of help first.

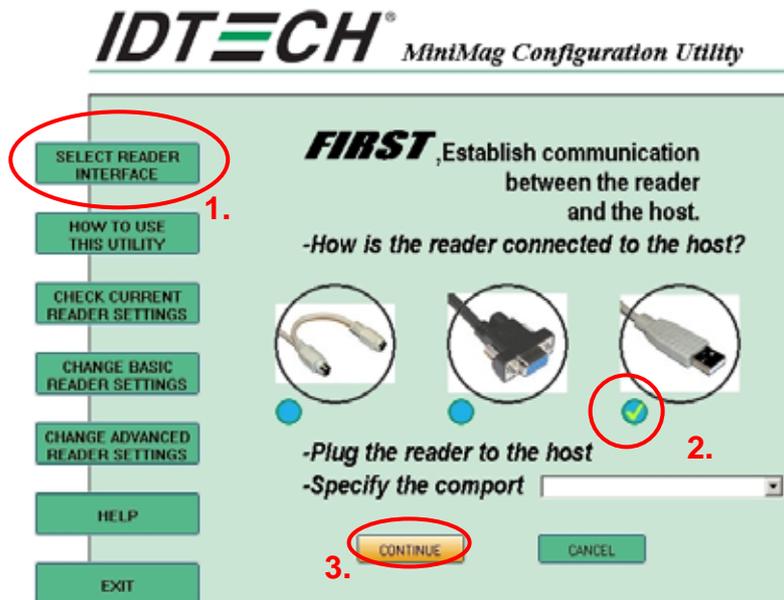

VIKINTEK MSR Track Setting

- I. The MSR default setting is **ISO Track 1 & 2. (For specific / customized track settings, please advise manufacturer before production)**
- II. In the event of any requirement to change the MSR setting, please run the “KB2000 setting programming” in the attached driver disk.

MSR Track Setting Procedure:

1. Select “MSR setting” for magnetic card reader and then click it.
2. Select “12” of Track(s) to Read and click “OK” (Factory Default)
3. Select “Download” and click it.
4. Please click the “start” and then download configuration data to decoder.
5. If you have any other setting question, please check the exposition of help index first.

